

**BOUNTY HUNTER®**  
METAL DETECTORS

# Tracker IV

M E T A L D E T E C T O R

## OWNER'S MANUAL



### Important Facts to Know about your Metal Detector.

1. This is a **MOTION** detector.  
You must **sweep** the searchcoil from **side-to-side** to detect metal.  
A motionless searchcoil over a metal object will not result in detection.
2. **Do not use indoors.** Detector is for outdoor use only.  
Household appliances emit electromagnetic fields, which can interfere with your detector. If conducting an indoor demonstration, turn the sensitivity down and keep the searchcoil away from appliances such as microwaves, computers and televisions. If your detector beeps erratically, turn off appliances and lights.  
  
Do not test by placing coins on the floor. Most floors contain metal.  
  
Keep the searchcoil away from floors, walls, and tables, which can contain metal.
3. Use 9-volt **ALKALINE** batteries only.  
Do not use Heavy Duty batteries.  
Do not use ordinary Zinc-Carbon batteries.
4. **Adjust sensitivity to a low level** in the event of false signals  
Always begin use at reduced sensitivity.  
Increase to full sensitivity after you are familiar with the detector's operation.

# TABLE OF CONTENTS

<b>Introduction</b> . . . . .	<b>3</b>
<b>Tracker IV Features</b> . . . . .	<b>3</b>
<b>Assembly</b> . . . . .	<b>4</b>
<b>Batteries</b> . . . . .	<b>5</b>
<b>Quick-Start Demo</b> . . . . .	<b>6</b>
<b>Basic Operation</b> . . . . .	<b>7-9</b>
<b>All Metal</b> . . . . .	<b>7</b>
<b>Discrimination</b> . . . . .	<b>7-8</b>
<b>Ground Balancing</b> . . . . .	<b>9</b>
<b>In the Field Techniques</b> . . . . .	<b>10-11</b>
<b>Pinpoint</b> . . . . .	<b>11</b>
<b>Trouble Shooting</b> . . . . .	<b>12</b>
<b>Metal Detecting Applications</b> . . . . .	<b>13-14</b>
<b>Headphones</b> . . . . .	<b>14</b>
<b>Treasure Hunter's Code of Ethics</b> . . . . .	<b>15</b>
<b>Warranty</b> . . . . .	<b>15</b>
<b>Accessories</b> . . . . .	<b>Back Cover</b>


# INTRODUCTION

The Tracker IV is a user-friendly instrument, requiring only a minimum of operator skill, yet delivering effective performance over a wide range of conditions and applications.

Streamlined in appearance, with only two operating knobs and a mode selection switch, the Tracker IV has eliminated the two most difficult aspects of metal detector operation, Tuning and Ground Balancing. Both of these functions are automatic with the Tracker IV.

The Tracker IV will detect in extreme ground conditions, ranging from salt (for beach hunting) to black sand (for gold prospecting), with no operator adjustments to the circuitry and with no loss of sensitivity.

From salt water beach conditions to black sand deposits common at gold prospecting locations, the Tracker IV sees through the earth's naturally occurring minerals to find buried metals.

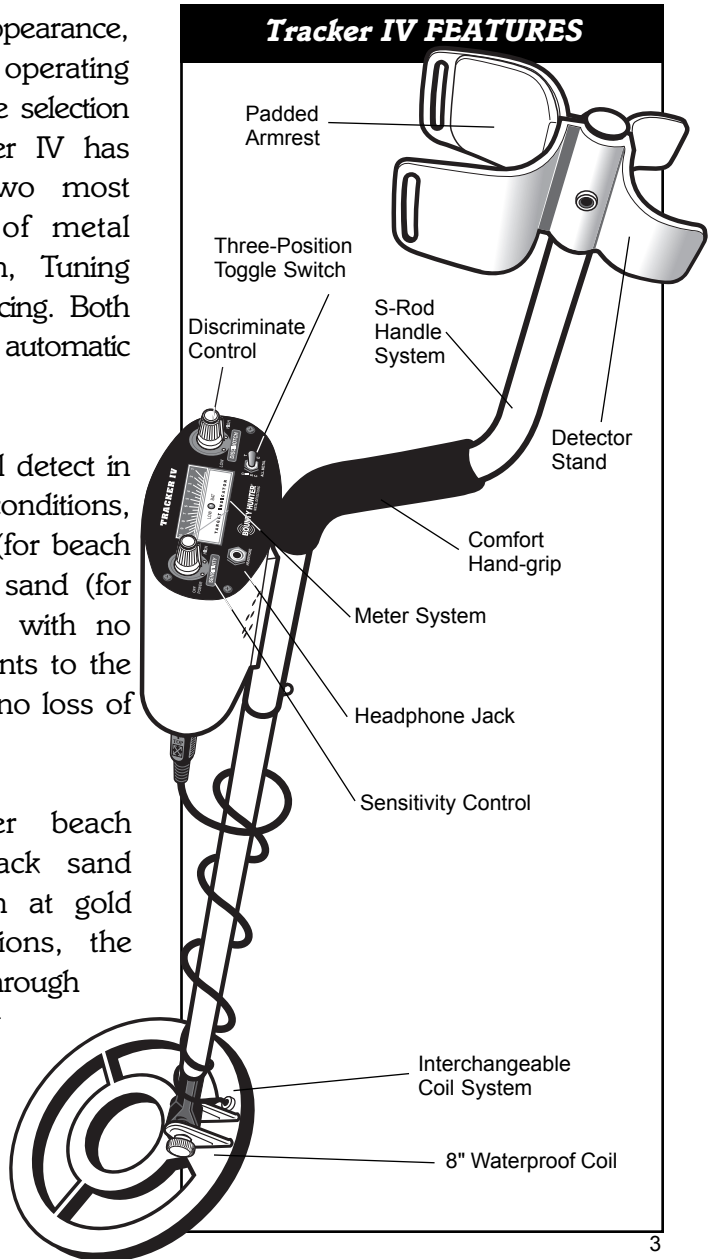

# EASY ASSEMBLY

**Assembling your Tracker IV Metal Detector is easy and requires no tools. Just follow these steps:**

- 1 Using the supplied bolt and knurled knob, attach the searchcoil to the lower stem.
- 2 Press the button on the upper end of the lower stem and slide the lower stem into the upper stem.

Adjust the stem to a length that lets you maintain a comfortable upright posture, with your arm relaxed at your side.


- 3 Wind the searchcoil cable around the stem. Leave enough slack in the cable to let you adjust the coil when you are hunting on uneven ground. Then tighten the knob at the end of the searchcoil.

**Note:** *To adjust the coil, simply loosen the knob.*

- 4 Insert the coil's plug into the matching connector on the control housing. Be sure the holes and pins line up correctly.

**Caution:**

- Do not force the plug in. Excess force will cause damage.
- To disconnect the cable, pull out the plug. Do not pull on the cable.

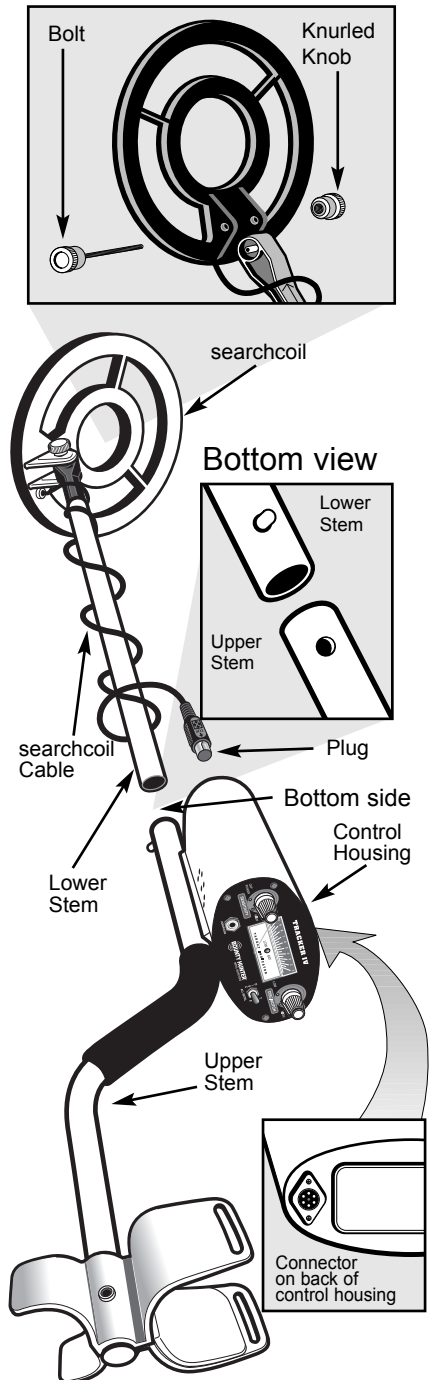

# BATTERIES

**IMPORTANT:** Always use **ALKALINE** batteries for optimal performance.

Always remove the batteries for prolonged storage.

**CHECK THE BATTERIES** if your detector exhibits any of the following symptoms:


- ❶ The unit does not turn on.
- ❷ Low speaker volume.
- ❸ Unit beeps continuously at low sensitivity setting.

The Low Battery indicator light will come on and stay on if the batteries are discharged. It should flash momentarily when the Power Switch is turned off.

**IMPORTANT:** Your Tracker IV metal detector requires two 9-Volt ALKALINE batteries.

*Follow these steps to install the batteries.*

- ❶ Carefully remove the battery compartment door by pressing the release clip on the right side of the door.
- ❷ Snap one battery onto each of the terminals and place the batteries inside the compartment. Insert batteries with the terminals facing inward.
- ❸ Replace the compartment door by carefully inserting opposite side of clip first. Then press down on clip side until battery door snaps into place.

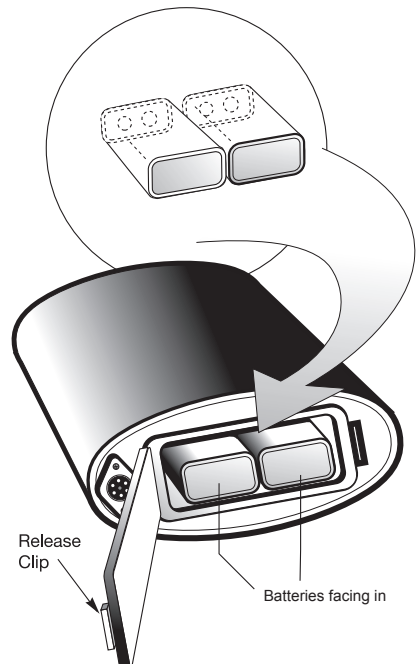

**DO NOT MIX OLD  
AND NEW BATTERIES**

# Quick Start DEMONSTRATION

Here is a quick way to demonstrate the basic features of your Tracker IV.

## I. Supplies Needed


- A quarter (25¢)
- A nickel (5¢)
- A Penny (1¢)
- A small piece of aluminum foil
- A Nail

## II. Position your Tracker IV


- Place the detector on a table, with the searchcoil hanging over the edge.
- Be sure that the searchcoil is far away from walls or metal objects. Keep the searchcoil away from any metal in the table.

## III. Beginning Switch Settings

- Right Knob (Discriminate) – LOW
- Toggle Switch – Middle Position
- Turn detector on with "Sensitivity" knob set to 3:00 position
- Reduce "Sensitivity" in case of interference

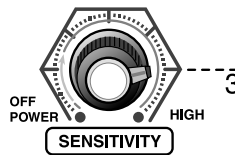

### TOGGLE SWITCH

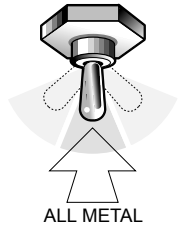


## IV. All Metal Detection

- A. Wave all objects over the searchcoil
- *NOTICE THE SINGLE TONE*

## V. Tone Mode Detection

- A. Move toggle switch to the right position – TONE
- B. Turn the "Discriminate" knob to 2:00 (about 3/4 turn)
- C. Sweep all of the different objects back and forth under the searchcoil
- *NOTICE THE DIFFERENT TONES*
  - *NOTICE THE METALS REJECTED*

### TOGGLE SWITCH

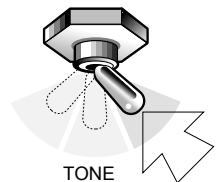

## VI. Disc Mode Detection

- A. Move the toggle switch to the left position – DISC
- B. Turn the "Discriminate" knob to LOW
- C. Sweep all of the different objects back and forth under the searchcoil.
- *NOTICE THE METALS REJECTED*
- D. Turn the "Discriminate" knob slowly to the right while sweeping all of the different objects at different settings.
- *NOTICE THE DIFFERENT TONES*
  - *NOTICE THE METALS REJECTED*

### TOGGLE SWITCH



# OPERATION

The Tracker IV is a “motion” detector. This means that the searchcoil must be moving to detect the presence of metal. When practicing with a stationary metal detector, keep the target moving over the coil. Objects held still under the searchcoil will not be detected.

## THREE MODES OF OPERATION

*The Tracker IV allows for three modes of operation:*

### **ALL METAL, TONE AND FULL DISCRIMINATE**

After turning the unit on, and adjusting your Sensitivity to the desired setting, you're now ready to decide on your mode of operation.





**ALL METAL:** (*Toggle Switch in the Middle*) In this mode, all different types of metal will be detected such as: iron, steel, aluminum, brass, silver, copper and gold. Applications: Relic Hunting, Gold Prospecting, Cache Hunting and general applications such as property marker locating. This mode provides maximum depth detection capability.

**FULL DISCRIMINATE:** (*Toggle Switch to the Left*) When using the Full Discriminator, most trash items will be automatically rejected. Adjust the DISCRIMINATE control higher to increase the range of discrimination.

**TONE DISCRIMINATE:** (*Toggle Switch to the Right*) When using the Tone Discriminator, a unique dual tone “beep” and automatic iron rejection makes finding treasure fun and easy. It's also possible to achieve a broken tone for certain pull-tabs by adjusting your Discriminate control to the approximate center position (12:00). With the two-tone discrimination, along with a broken tone for pull-tabs, you will be able to identify types of buried metals according to the audio tones emitted. Applications: Coinshooting, Jewelry Hunting and detecting in highly trashed areas.

# OPERATION

## 1 TONE MODE AUDIO RESPONSES

	-----	▲ ▲ ▲ ▲ ▲ ▼ ▼ ▼ ▼ ▼	-----
<b>NO RESPONSE</b>	<b>LOW TONE</b>	<b>BROKEN TONE</b>	<b>HIGH TONE</b>
			
Iron & Steel	Gold & Nickel	Old & New Pull Tabs	Copper, Silver & Brass

## 2 TONE DISCRIMINATION

(continued)

(Toggle switch to the Right) Classifies detected metal objects by emitting a low or high tone.

Adjust the DISCRIMINATE control higher to increase the range of the low tone. It is possible to set the DISCRIMINATE level so that nickels have a low tone, larger coins have a high tone, and pull-tabs have a low tone or in-between "broken" tone. The "broken" tone makes pull-tabs and trash easily recognizable.



Sensitivity will be reduced slightly when using the Tracker IV in the Tone Discrimination mode. If you want optimal depth capability, operate in the All Metal mode by turning the Discriminate control completely counterclockwise; then turn the Sensitivity control clockwise to its highest clockwise position without chatter. If your Tracker IV chatters or beeps erratically, reduce the Sensitivity by turning the left knob counterclockwise.



### AUTO GROUND CONTROL:


The Tracker IV automatic Ground Track feature allows operation in virtually all soil conditions, regardless of mineral content.

Use it effectively on the beach or for gold prospecting. In the ALL METAL Mode (Toggle switch in the middle), the Tracker IV will detect gold nuggets through black sand and will find deeply buried relics in all types of soil.

### OPERATING TIPS:

Turn the detector on using the left knob. NOTE: The detector will remain silent when turned on. It will emit sound when metal passes beneath the searchcoil.

As the left knob is clicked on, it will be at the lowest sensitivity setting. Turning the control knob toward "HIGH" increases sensitivity to small or deeply buried objects. If the unit "chatters", reduce the sensitivity slightly, until the chatter stops.

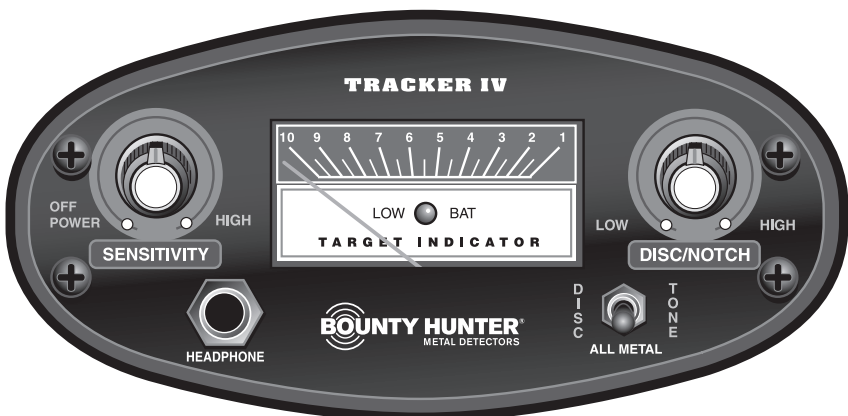

For maximum performance, operate with the sensitivity as high as possible. The sensitivity can generally be set higher when operating in Full Discriminate (DISC) or Tone Discriminate (TONE) modes.


# IN THE FIELD

## STANCE


Stand with your arm extended in front of your body. Don't bend or stoop; stand in a comfortable position. Hold the unit so that the searchcoil is about 1/2-inch above the ground. Adjust the searchcoil so that it is parallel to the ground.

## SWEEP

Standing in the search position, swing the searchcoil gently from side to side, slightly overlapping each sweep as you move forward. Keep your searchcoil approximately 1/2-inch above the ground as you search. Raising it during the sweep, or at the ends of your sweep, can cause false readings. Move slowly; hurrying will cause you to miss targets.

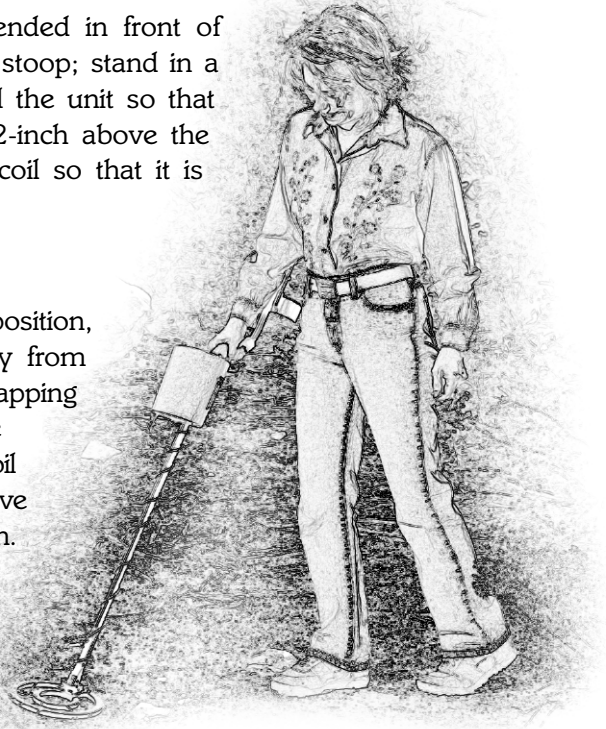

Most desirable objects will respond with a repeatable tone. When discriminating, iron and foil objects generally do not respond. False signals can be caused by trashy ground, electrical interference, or by large irregular trash objects. These signals are easily recognized by their often broken or non-repeatable nature.

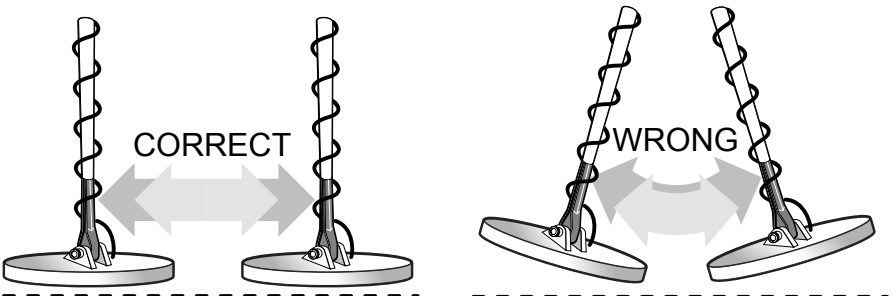


**PINPOINTING**

*Accurate pinpointing takes practice and is best accomplished by “X-ing” the suspected target area.*

- ❶ Once a buried target is identified by a good tone response, continue sweeping the coil over the target in a narrowing side to side pattern.
- ❷ Take visual note of the place on the ground where the “beep” occurs as you move the coil slowly from side to side.
- ❸ Stop the coil directly over this spot on the ground.
- ❹ Now move the coil straight forward and straight back towards you a couple of times.
- ❺ Again make visual note of the spot on the ground at which the “beep” occurs.
- ❻ If needed, “X” the target at different angles to “zero in” on the exact spot on the ground at which the “beep” occurs.

**REMEMBER:** The detector will beep just as the center of the searchcoil passes directly over the buried object.

If you have difficulty pinpointing very strong signals, try lifting the coil higher off the ground until a weaker, but more concise, signal is heard. For very weak signals, try moving the coil in short quick sweeps, closer to the ground.

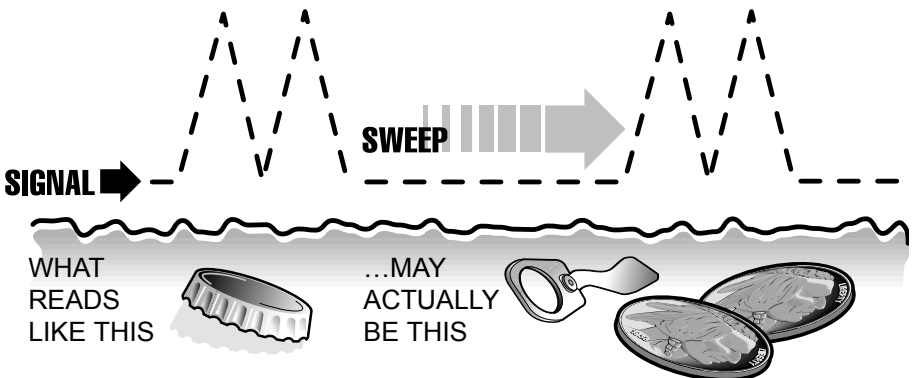


# TROUBLESHOOTING

The following troubleshooting steps may assist you in case you're having problems with your Tracker IV.

## YOUR DETECTOR IS EMITTING ERRATIC SIGNALS WHEN YOU'RE IN THE FIELD.

Your **SENSITIVITY** may be set too high. Try reducing the **SENSITIVITY** slightly until the false signaling disappears. Remember to swing your coil slowly. Some inconsistent signals will occur on highly rusted metals. If the signal does not repeat after successive passes of the coil over the same area, then the target is usually not worthwhile. Natural and man-made electromagnetic fields can cause interference.

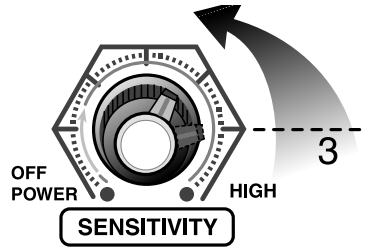

## YOUR DETECTOR IS NOT STABLE AND HAS A PULSING, DISTORTED TONE INSTEAD OF A CLEAR TONE.

This can occur if you're operating near another detector or near power lines that can interfere with the detector's operating frequency.

## YOUR DETECTOR IS EMITTING A CONSTANT LOUD TONE OR CONSTANT REPEATING TONES

This usually occurs when the batteries are low. Try replacing your batteries with two new alkaline batteries.

**NOTE:** Always use Alkaline Batteries for proper performance.



# METAL DETECTING APPLICATIONS

## COINSHOOTING

The most popular application for metal detectors

### CONTROL SETTINGS REQUIRED:

- 1 Toggle switch to the left (disc. mode).
- 2 Discriminate knob at 3:00 (3/4 turn).

Only silver, copper and brass will be detected. Gold items will be eliminated. Different denominations of coins will induce different sounds.

## RELIC HUNTING

A relic is a historical object, sometimes of great value. The most effective method for locating relics is to first conduct historical research. Visit your local library to learn of historical events having occurred in your area. You can then target your search to a specific area and gain valuable insight into your local history.

### CONTROL SETTINGS REQUIRED:

- 1 Toggle switch in center position.
- 2 Discriminate knob is in OFF position.

## CACHE HUNTING

A cache, pronounced "cash", is a buried or hidden valuable stored inside a case, can, strong box, or a bag. A cache could be the loot from a bank robbery or just someone's life savings. A cache is often hidden in the floor or walls of an old house, or is buried nearby. Also search old camp sites.

### CONTROL SETTINGS REQUIRED:

- 1 Toggle switch in center position.
- 2 Discriminate knob is in OFF position.

## JEWELRY HUNTING

Jewelry can be found wherever people congregate. Beaches, parks, school yards and fair grounds are all littered with lost jewelry.

### CONTROL SETTINGS REQUIRED:

- 1 Toggle switch in RIGHT position (tone mode).
- 2 Discriminate knob at half way, 12:00 position.

You should dig only the lower and high tones. Broken tones indicate

## METAL DETECTING APPLICATIONS

trash items. Gold rings will induce a low sound. Be aware that some pull-tabs can also induce a low tone.

Silver will induce a high tone. Chains and necklaces are difficult to find. If you are looking for gold rings, don't get discouraged; you will dig up many broken pull-tabs before you find your first gold ring!

## HOUSEHOLD APPLICATIONS

Find property markers, lost keys, machine parts, and other lost items..

### CONTROL SETTINGS REQUIRED:

- ① Toggle switch in center position.
- ② Discriminate control knob is in OFF position.

## GOLD PROSPECTING

Find gold in abandoned gold mines and river beds where gold is continuously washed down stream from its place of origin.

### CONTROL SETTINGS REQUIRED:

- ① Toggle switch in center position.
- ② Discriminate control knob is in OFF position.

---

## USING HEADPHONES

Using headphones (not included) improves battery life, and prevents the sounds from annoying bystanders.

It also allows you to hear subtle changes in the sound more clearly, particularly if searching in a noisy location. For safety reasons, do not use headphones near traffic or where other dangers are present. This device is to be used with interconnecting cables/headphone cables shorter than three meters

## TREASURE HUNTER'S CODE OF ETHICS:

- Always check Federal, State, County and local laws before searching.
- Respect private property and do not enter private property without the owner's permission.
- Take care to refill all holes and leave no damage.
- Remove and dispose of any and all trash and litter found.
- Appreciate and protect our inheritance of natural resources, wildlife and private property.
- Act as an ambassador for the hobby, use thoughtfulness, consideration and courtesy at all times.
- Never destroy historical or archaeological treasures.
- All treasure hunters may be judged by the example you set; always conduct yourself with courtesy and consideration of others.

## DISPOSAL



Dispose of the packaging materials properly, according to their type, such as paper or cardboard. Contact your local waste-disposal service or environmental authority for information on the proper disposal.

Do not dispose of electronic devices in the household garbage! As per Directive 2002/96/EC of the European Parliament on waste electrical and electronic equipment and its adaptation into German law, used electronic devices must be collected separately and recycled in an environmentally friendly manner.

In accordance with the regulations concerning batteries and rechargeable batteries, disposing of them in the normal household waste is explicitly forbidden. Please make sure to dispose of your used batteries as required by law – at a local collection point or in the retail market. Disposal in domestic waste violates the Battery Directive.

## EC DECLARATION OF CONFORMITY

Bresser GmbH has issued a „Declaration of Conformity“ in accordance with applicable guidelines and corresponding standards. This can be viewed any time upon request.

## WARRANTY & SERVICE

The regular guarantee period is 2 years and begins on the day of purchase. To benefit from an extended voluntary guarantee period as stated on the gift box, registration on our website is required. You can consult the full guarantee terms as well as information on extending the guarantee period and details of our services at [www.bresser.de/warranty\\_terms](http://www.bresser.de/warranty_terms)

These operating instructions are to be considered a component of the device. Please read the safety instructions and the operating instructions carefully before use. Keep these instructions for renewed use at a later date. When the device is sold or given to someone else, the instruction manual must be provided to the new owner/user of the product.

Bresser GmbH  
Gutenbergstr. 2  
DE-46414 Rhede  
[www.bresser.de](http://www.bresser.de) • [info@bresser.de](mailto:info@bresser.de)

Errors reserved - technical specifications subject to change.

Copyright© 2010 by First Texas Products, L.L.C.  
All rights reserved. Bounty Hunter® is a registered trademark of First Texas Products, L.L.C. Made in China.

# ACCESSORIES

## Carry Bag

Rugged double-stitched construction - *CBAG-W*

## Pouch & Digger Combo

Pouch with 2 large pockets & 9" heavy duty digging tool. *TP-KIT-W*

## Bounty Hunter Stereo Headphones

Use with Bounty Hunter metal detectors. Lightweight and adjustable with true stereo sound, adjustable volume, 1/8 jack with 1/4 adaptor, 4' cable. *HEAD-W*

## Pin Pointer

Pinpoints the exact location of buried metal objects. Audio signal indicator and vibrator. Runs on 1 – 9-Volt Battery. *PIN POINTER-W*

## Sand Scoop

Large scoop with filtering holes. Made of strong plastic. *SAND SCOOPBH*

## Coil Covers

Protect your coil from abrasion and damage.

10" Coil Cover – *10COVER*

8" Coil Cover – *8COVER-N*

4" Coil Cover – *4COVER*

## Replacement/Accessory Search Coils

10" Magnum Coil – *10COIL*

8" Replacement Standard Coil – *8COIL-N*

4" Gold Nugget Coil – *4COIL*

## 9" Heavy-Duty Digging Tool

Metal blade with comfortable plastic handle and depth gauge *TROWEL-2*

## Digging Tool

Light and practical wide blade digging tool. *TROWEL-W*

## Bounty Hunter T-Shirt

100% cotton with Bounty Hunter® Logo. Sizes – LG, XL & XXL

## Bounty Hunter Baseball Cap

One size fits all, with Bounty Hunter® logo.

## Gold Prospecting Kits

### Items Included:

	Gold Kit PART NUMBER: GOLDKIT1	Deluxe Kit PART NUMBER: GOLDKIT2	Hardrock Kit PART NUMBER: GOLDKIT3
10 1/2" Gold Pan	x	x	x
14" Gold Pan	x	x	x
Classifier		x	x
2 – Shatterproof Vials	x	x	x
Snuffer Bottle	x	x	x
Black Sand Magnet		x	x
Treasure Scoop		x	x
Tweezers			x
Magnifier			x
Crevice Tool			x
Rock Pick			x
Instruction Booklet	x	x	x
Backpack		x	x

FOR COMPLETE DETAILS VISIT [WWW.DETECTING.COM](http://WWW.DETECTING.COM) • 1-800-413-4131